
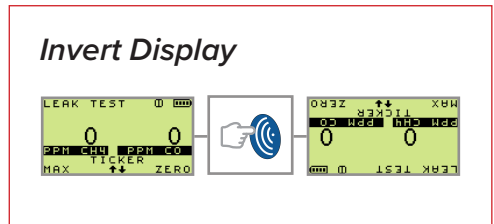
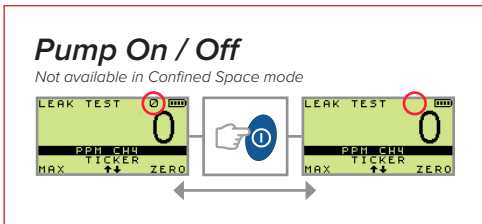
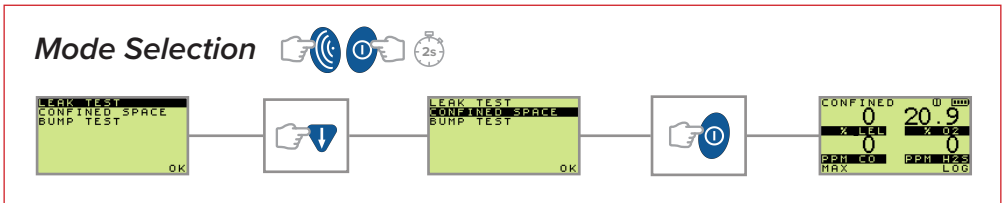
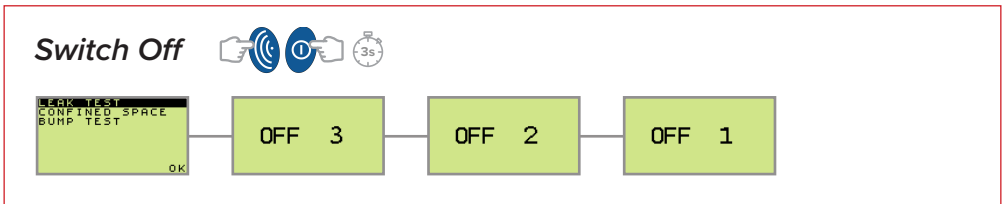


# GT-Fire

## Quick Operation Guide

This guide refers to a default GT54.  
Your GT configuration may differ.

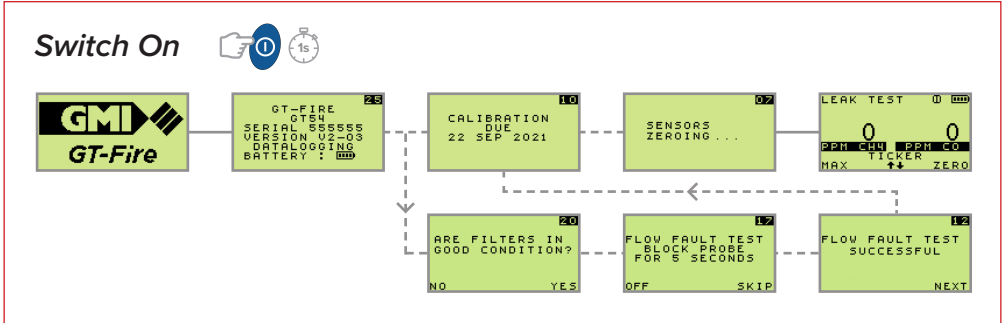

## Clear Flow Fault

 


## Change Range

Not available in Confined Space mode



## Max / Min




## Acknowledge Alarm




## Zeroing

 Not available in Confined Space mode



## Manual Log

 Not available in Leak Test Mode



## Backlight / Flashlight

